


Vehicle Status Monitor

▼ Vehicle Status Monitor

1. Select “Information” on the Home screen to display the vehicle status monitor.
2. Select “Vehicle Status Monitor”.

You can customize settings in the setup display as follows:

Item	Explanation
Vehicle Warning Messages	If there is a problem with the vehicle, information about the problem is displayed.
Next Service	<p>The next maintenance period is displayed.</p> <p><u>Date</u> The date manually set by the customer is displayed.</p> <p><u>Distance</u> If “Next Service Date” is set to “Automatic” The “Distance Until Oil Change” content is displayed.</p> <p>If “Next Service Date” is set to “Manual” The travelled distance manually set by the customer is displayed. However, when any of the following conditions is met, the “Distance Until Oil Change” content is displayed.</p> <ul style="list-style-type: none"> • You have not set the travelled distance. • “Distance Until Oil Change” is shorter than the travelled distance set by the customer.

Item	Explanation
Maintenance Details	Distance Until Oil Change The travelled distance until engine oil needs to be replaced is displayed.
	Next Service The next maintenance period manually set by the customer is displayed.
Vehicle Maintenance Settings	The current tyre pressure can be checked. <div data-bbox="456 352 1025 563" style="border: 1px solid black; padding: 5px; margin: 10px 0;">  </div> <ol style="list-style-type: none"> 1. When tyre pressures were last modified 2. Air pressure of each tyre 3. Condition of each tyre <ul style="list-style-type: none"> • When air pressure is low: Yellow color • When air pressure is correct: Blue color • When air pressure cannot be monitored: Black color 4. Tyre pressure units <p>NOTE</p> <ul style="list-style-type: none"> • While the tyre pressure monitoring system is learning the tyre positions, such as immediately after a tyre position has been changed, the tyre pressure at the tyre position prior to it being changed is displayed until the system completes the learning. For this reason, the tyre pressures displayed for the tyre positions may be different from the actual tyre pressures at the tyre positions. • The air pressure displayed on the display may be different from the value measured using an air pressure gauge. • The display units for the tyre pressures can be changed. Refer to Settings on page 7-2.
	Next Service Date The method of setting the next maintenance can be selected from the following. <ul style="list-style-type: none"> • Automatic • Manual
	Set Next Service Date If “Next Service Date” is set to “Manual”, the next maintenance date can be set.
	Set Next Service Distance If “Next Service Date” is set to “Manual”, the travelled distance until the next maintenance period can be set.
Reset Oil Change Distance The “Distance Until Oil Change” content can be reset. After replacing the engine oil, perform the reset (engine oil data resetting) of the recorded value in this item.	