
Vehicle Settings

▼ Vehicle Settings

Configures vehicle convenience features.

Door Locks

Adjusts settings for door locks and keyless entry.

Function	Available setting changes
Automatic Door Locks Configures when the automatic door locks operate.	Lock: While Driving, Lock: While Driving, Unlock: Ignition Off, Lock: In Gear, Lock: In Gear, Unlock: In Park, Lock: While Driving, Unlock: In Park, Off
Automatic Re-Lock Wait Time Sets the time for the doors to re-lock if a door is not opened.	30 seconds, 60 seconds, 90 seconds
Keyless Auto-Lock Enables the vehicle to automatically lock when the driver walks away.	Enable, Disable
Keyless Beep Confirmation Volume Adjusts the beep volume when locking/unlocking doors.	Low, Medium, High, Off
Keyless Unlock Mode Selects which doors unlock with the keyless entry switch.	Once: All Doors, Once: Driver's Door, Twice: All Doors
Restore Factory Settings Restores door lock settings to the factory defaults.	—

Exterior Lighting

Configures settings for the vehicle's exterior lighting.

Function	Available setting changes
Automatic Headlight Sensitivity Adjusts the sensitivity of the automatic headlight illumination feature.	Low, Medium-Low, Medium, Medium-High, High

Function	Available setting changes
Automatic Headlight Timeout Sets the length of delay before headlights turn off.	30 seconds, 60 seconds, 90 seconds, 120 seconds, Off
Adaptive LED Headlights (ALH) Switches between high and low beam automatically.	Enable, Disable
High Beam Control System (HBC) Switches between high and low beam automatically.	Enable, Disable
Adaptive Front-Lighting System (AFS) Adjusts lighting output based on driving conditions.	Enable, Disable
Daytime Running Lights (DRL) Enables the daytime running lights.	Enable, Disable
Manual Headlight Leveling Adjusts the headlight beam angle.	Beam angle (11 levels)
Coming Home Light Sets the length of delay before headlights turn off.	30 seconds, 60 seconds, 90 seconds, 120 seconds, Off
Leaving Home Light Turns headlights on with unlock button press on key.	Enable, Disable
Restore Factory Settings Restores exterior lighting settings to factory defaults.	—

Interior Lighting

Configures settings for the vehicle's interior lighting.

Function	Available setting changes
Ambient Lighting Sets the intensity of ambient interior lighting.	Low, Med, High, Off
Illuminated Entry Duration Selects the desired illuminated entry lighting durations.	7.5 seconds, 15 seconds, 30 seconds, 60 seconds
Restore Factory Settings Restores interior lighting settings to factory defaults.	—

Rain-Sensing Wipers

Enables automatic rain-sensing windshield wipers.

Available setting changes
Enable, Disable

Automatic Folding Side Mirrors

Enables the side mirrors to fold automatically.

Available setting changes
Enable, Disable

Turn Signals

Configures settings for turn signal operation.

Function	Available setting changes
Three Flash Turn Signal Enables the turn signal to flash three times then stop.	Enable, Disable
Turn Signal Indicator Volume Adjusts the volume of the turn signal indicator.	Low, Medium, High
Restore Factory Settings Restores the turn signal settings to the factory defaults.	—

Rear Window Defogger

Selects the duration of rear window defogger operation.

Available setting changes
Automatic Shut Off, Continuous

Link Seat & Climate Control Temperatures

Enables climate control to activate seat heating/cooling functions when set to AUTO.

Available setting changes
Enable, Disable

Fuel Door Lock Delay

Sets length of delay until fuel door locks after vehicle is locked.

Available setting changes

0 seconds, 30 seconds, 60 seconds, 90 seconds, 120 seconds
--